

1A3900
Brandon
Lightweight 4 Wheel Rollator

Max User Weight
19st (120kg)

Item Colour
Red

General Safety Warning

Please make sure that you read and follow these instructions carefully. Keep these instructions in a safe place for future reference.

1. INTENDED USE

The Lightweight 4 Wheel Rollator is designed to provide support and assistance to those unable to, or who lack the confidence, to walk without some level of support. This rollator is intended for indoor and outdoor use, and folds away for easy storage or transportation.



2. SAFETY

Warning: The maximum user weight must not be more than 19st (120kg). Do not adjust the rollator while in use. Only use as a walking aid in the forward direction. Do not use the rollator on stairs or escalators and take care on steep hills. Do not sit on the seat without locking the brakes first. Do not use the seat to transport people or objects. Do not use the seat without the backrest in place. Do not hang items from the handles as this will affect the stability of the rollator. Make sure the rollator is locked in the open position before use. Check the brakes before use. Make sure that all parts are secure and that moving parts are in good working order.

Loads should only be transported using the basket supplied (maximum load 5kg).

Handle Height Range: 825 - 950mm
Length: 915mm (folded) - 1110mm (Unfolded).

3. UNPACKING

Remove the packaging and check all parts carefully. Contact your supplier immediately if parts are missing or damaged and do not try and assemble.



3.1 Contents:

1. Rollator assembly
2. Storage Basket (fitted to frame)
3. Hand-wheel Bolt x 2
4. Backrest
5. Front wheels set
6. Rear wheel with brake handle and cable assembly x 2
7. C-clip x 2
8. User instructions

4. ASSEMBLY



Insert the front wheel assembly into the the front frame tubes and secure with the c-clips.



Insert the rear wheels into the rear frame tubes until the button clip clicks into place.

Note: Make sure all wheels are all set to the same height before use.



Insert the handlebars and secure with the handwheel bolts on both sides.



Fit the back rest into the frame and secure with 2x snap clips on both sides.

4.1 Handle Height Adjustment

Adjust the Rollator handle height so that when the user's arm is down to their side, the hand-grip is at wrist height. This will ensure the arms are at an approximate 20°-30° bend when using the Rollator.



Undo and remove the hand-wheel by turning anticlockwise. Adjust the handle height to the required position, then secure using the hand-wheel. Repeat for the opposite handle.

Note: Make sure both handles have been set to the same height before use.

5. USING THE ROLLATOR

5.1 Brake Operation



To slow down or stop the rollator, pull both brake handles up.



To apply the parking brake, push the brake handles down until they lock into place.


Note: Make sure both brake handles have been applied.

Pull both handles up to release the parking brakes.

Warning: If the brakes fail to stop or lock the wheels, stop using the rollator immediately. Do not use the rollator again until the brakes have been checked and correctly adjusted.

5.2 Brake Adjustment

Warning: The following section requires some technical ability, do not attempt to carry out the adjustment unless you are confident to do so. Incorrectly adjusted brakes can lead to injury, please contact your supplier if you require assistance.

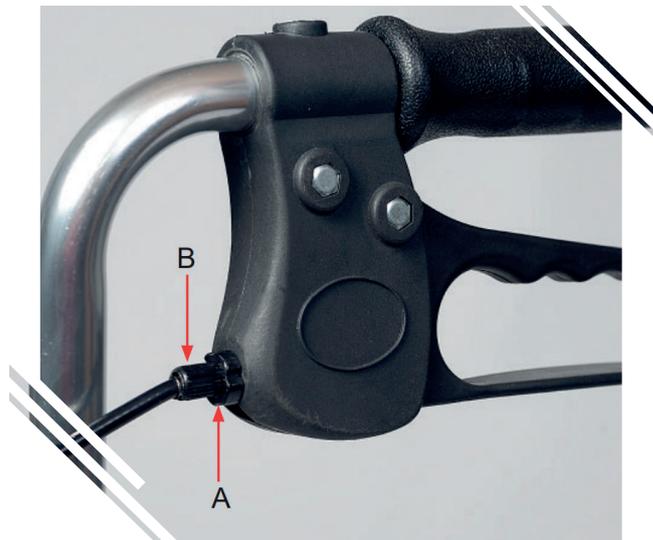

Tightening the Brakes

Loosen the lock nut (A), turn the adjuster (B) anticlockwise, then re-tighten the locknut.

Note: There must be a gap of 2-3 mm between the brake mechanism and the wheel, when the brake lever is released.

Test the brakes in accordance with **Section 5.1**.

5.4 Opening the Rollator

Holding one handlebar, push down on the seat until all four wheels are extended out and the seat is fully flat.

Before using the rollator make sure that all four wheels make contact with the floor and the rollator is stable in the open position.

5.5 Folding the Rollator



Pull up the seat support bar until the rollator closes. For more compact storage, pull up the backrest.

6. MAINTENANCE

Check both hand-wheels are secure.
Check all wheels can rotate freely.
Regularly check for wear and damage.
Any suspected faults or damage should be reported immediately to your supplier and the product taken out of use. Check brakes regularly in accordance with **Section 5.1** before use.

7. CLEANING

Make sure that all dirt and debris is removed from around the wheels, axle and brakes.

To clean the bag wipe with a damp cloth. Do not machine wash.

Clean the frame regularly, using a general purpose, neutral detergent and warm water.

Please check the suitability of the cleaning products before use. Do not use abrasive cleaners or cloths as these could permanently damage the surface and invalidate any warranty.

Always allow the product to dry thoroughly prior to use or storage.

8. PRODUCT DISPOSAL

This product should be thoroughly cleaned prior to disposal. This product is manufactured from metal and plastic and can be disposed of through Local Authority Household Waste and Recycling Centres or through Local Trade Waste Collectors.



Clearwell
mobility 

21 Albert Drive
Burgess Hill
West Sussex
RH15 9TN

01444 253 300